


Assembly instruction:

Rectangular workbench with open frame.


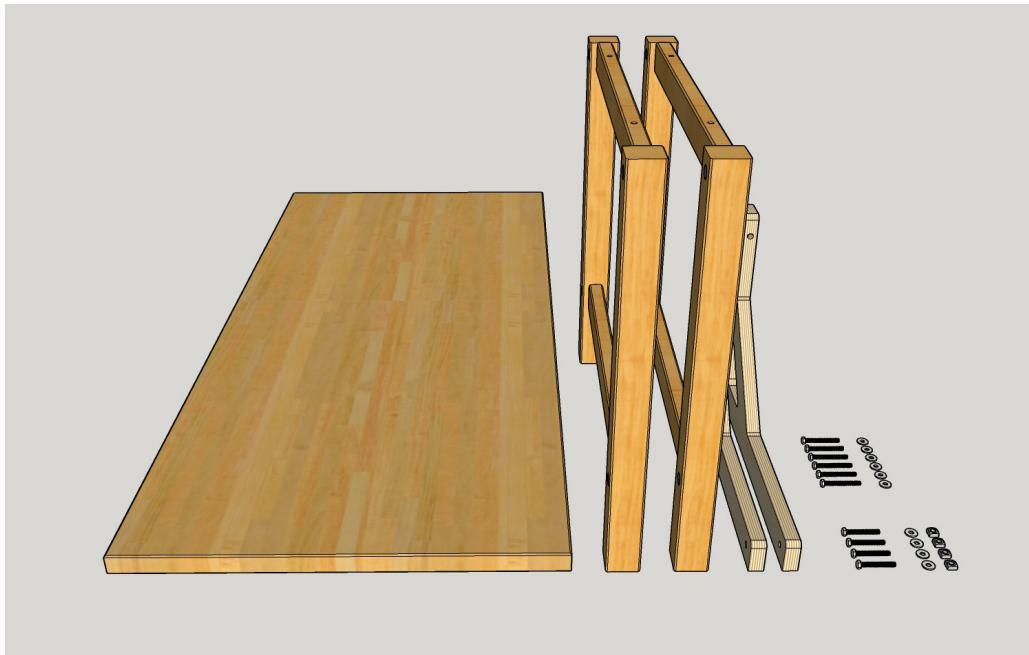



Parts for the base frame:

- 2x end gate
- 2x support triangle
- 4x bolt M8x60 mm
- 4x washer Ø8/22
- 4x square nut M8

Parts for the bench top:


- 1x bench top
- 6x bolt M8x70 mm
- 6x washer Ø8/22

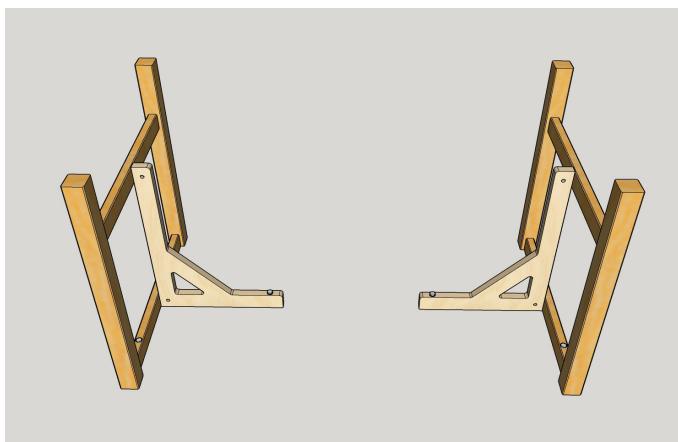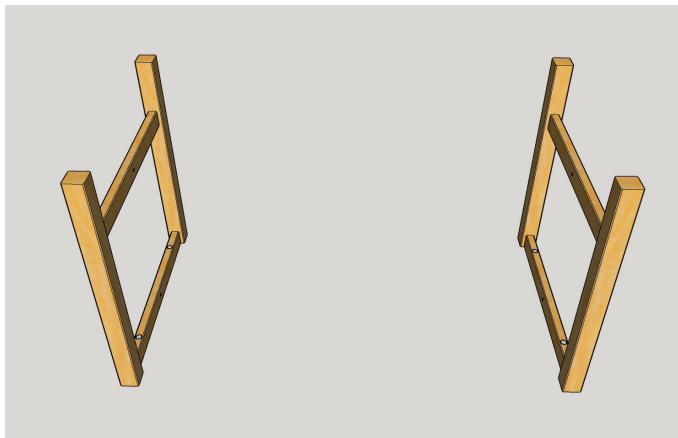

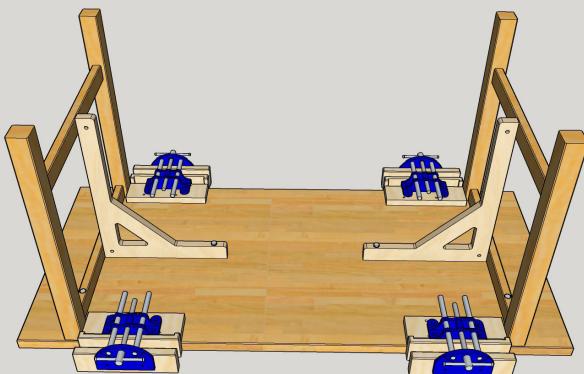

If you need to install vices, do this before you turn over the bench.

See separate instruction for the installation of vices.

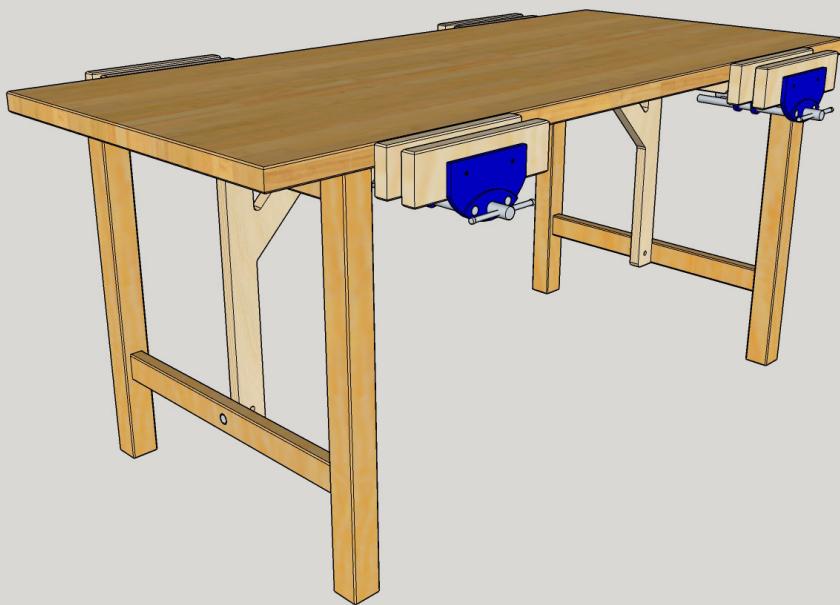

Turn over the bench, then
You are ready to go!

